


# Equatorial Platforms Cordless Slew Control

## Base Station

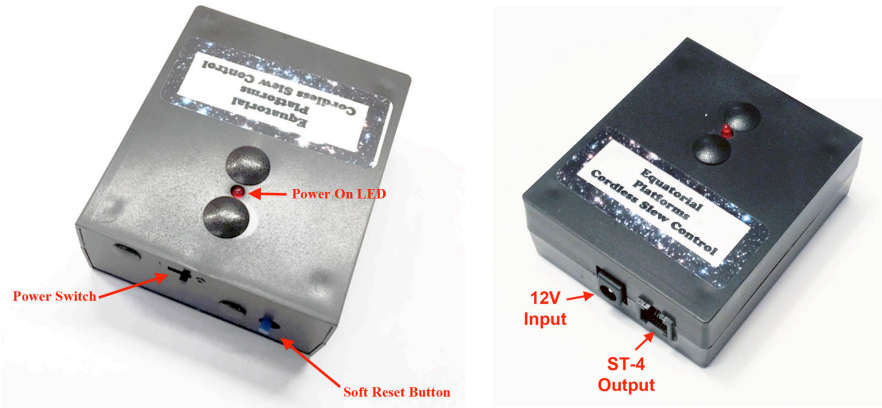

## Startup

- 1) Plug in 12V power supply and ST-4 cable.
- 2) Slide power switch from 0 to 1.
- 3) After about 30 seconds the Base Station LED will start blinking. When Base Station LED is steady it is connected to the Wireless Remote.

## Soft Shutdown

To prevent inadvertent damage to the software

- 1) Press and hold the **blue** soft reset button until Base Station LED starts blinking, then release.
- 2) When Base Station LED turns off, slide the power switch from 1 to 0.
- 3) Power cable may now be disconnected.

## Wireless Remote



- Power Switch on Back:** Switch to **on** to operate, **off** to store.  
**Enable High Speed:** Press once to enable high speed slewing.  
**Disable High Speed:** Press once to return to slow speed slewing.

## Slewing

- 1) Direction buttons require 2 pushes, first push starts slew, second push stops slew.
- 2) Enable/Disable high speed can be pressed once (and released) anytime before or during a slew.

**1 Year limited warranty:** Equatorial Platforms warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 1 year from the date of purchase under normal use. During this warranty period, Equatorial Platforms will, at its option, repair or replace the product without charge for parts or labor when delivered to Equatorial Platforms with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to Equatorial Platforms are your responsibility. This warranty does not apply if the product has been altered or repaired by anyone other than Equatorial Platforms or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. **The product is not a toy. Keep away from children.**